


MK1 disassembly

1. Take off the two (glued) pipes on the roof as below (other type coaches are all the same)




2. Loosen the following four screws to remove the end plate of the coach.

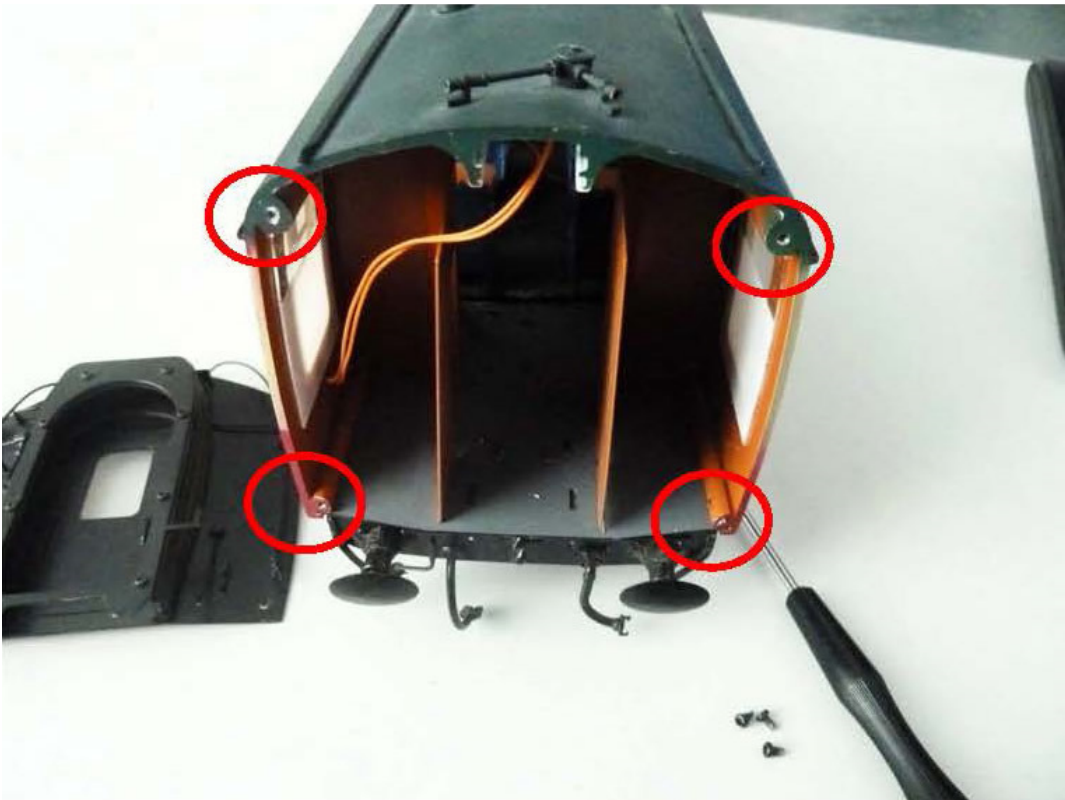

3. Cut off the two wires inside of the coach



4. Take out the coach body from the chassis plate as the arrows show.

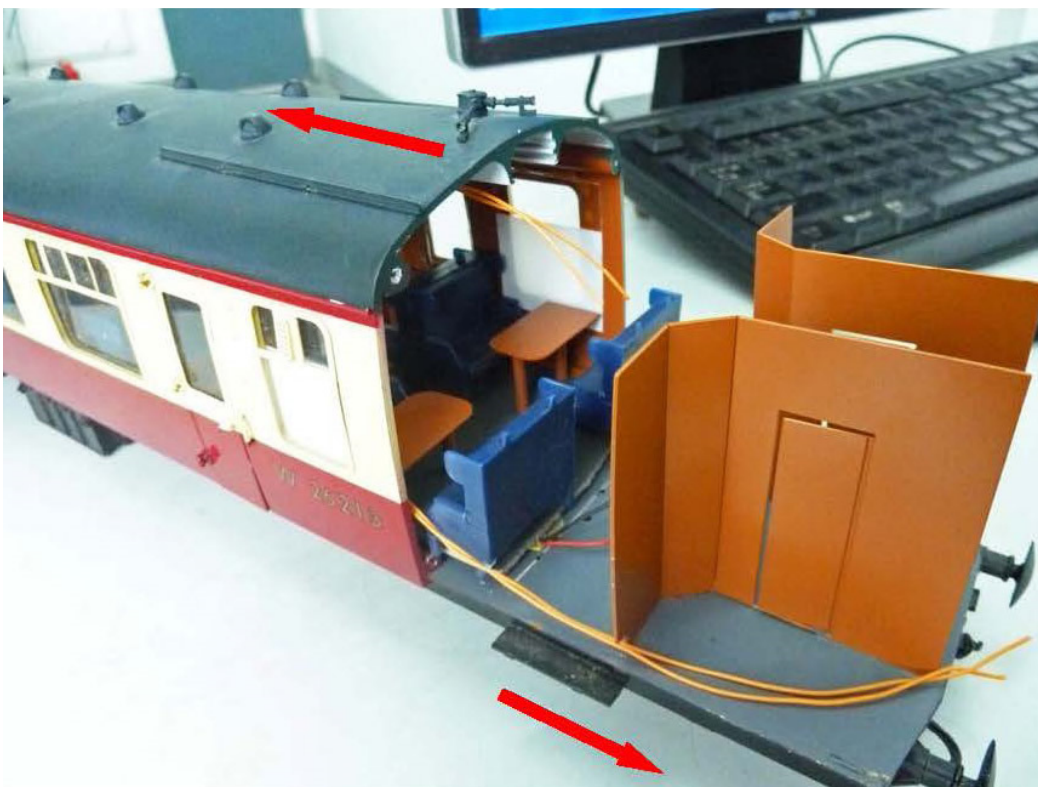

To install the coach as below:

Insert the coach body and chassis plate → Connect the two wires → Install the end plate →
Fix the two pipes on the roof (to make the pipes firmer, you can use a little glue)